

Specific directions for NPC- installation to Hectronic - cash systems (petrol station)

The so-called "HECTOR- Video interface" protocol supports actions on the pumps (actual not supported) and booking procedures from up to four points-of-sale. Each cash terminal has an own comport for using the Hector interface.

The data format of the interface should be set to **9600 baud, 8 bit, even parity**.

All actions are sent via separate comport by the cash system. The point-of-sale number must be entered in the POS Menu, however.

If the POS-number "00" is entered (default), all data will be supported irrespective of the received POS-number.

Actions on the pumps (pickup/replace nozzle etc.) are ignored.

Hectronic cash terminal

NPC ,DATA IN`

**9pole SUB-D-
Male plug**

cable

9pole SUB-D plug male

TxD	3	_____	2	RxD
RxD	2	_____	3	TxD
GND	5	_____	5	GND