


## Anmerkungen Einstellungen IP-VCA mit Dahua Wärmebildkamera STC-131DSTF

Für die Konfiguration mit der Dahua Kamera muss zunächst an der Kamera folgende Einstellung unter ->Setup -> Video -> Substream gemacht werden:

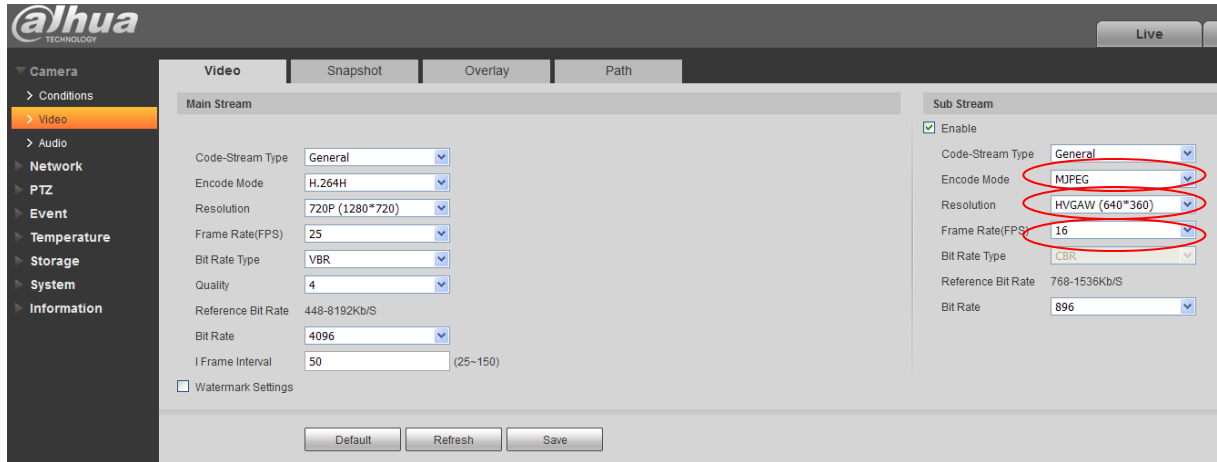


Der Sub-Stream auf „**Encode Mode**“ = **MJPEG** zu ändern.

- Resolution auf **640\*360** stellen
- Frame Rate auf **16fps** .


Eine Video Qualität kann hier nicht unter MJPEG eingestellt werden! Abschließend bitte mit **Save** die Einstellungen speichern .

Da das Overlay der Temperatur teilweise stört, wenn in diesem Bereich auch eine Objektanalyse definiert ist, kann unter *Camera ->Video -> Overlay* die Einblendung ausgeschaltet werden:

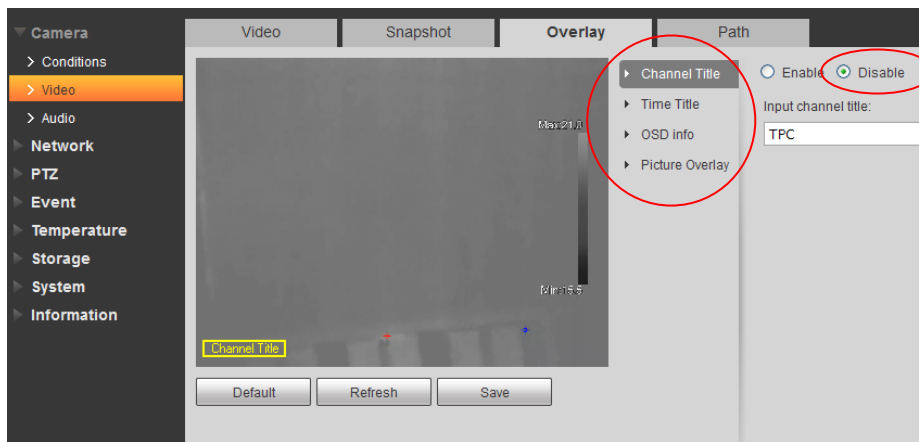

Dazu jeweils bei *Channel title, Time Title, OSD info* bzw. *Picture Overlay* den Haken bei **disable** setzen, und mit **Save** abspeichern.

Die Thermo-Markierungen entfernt man unter *Temperature -> Global* :

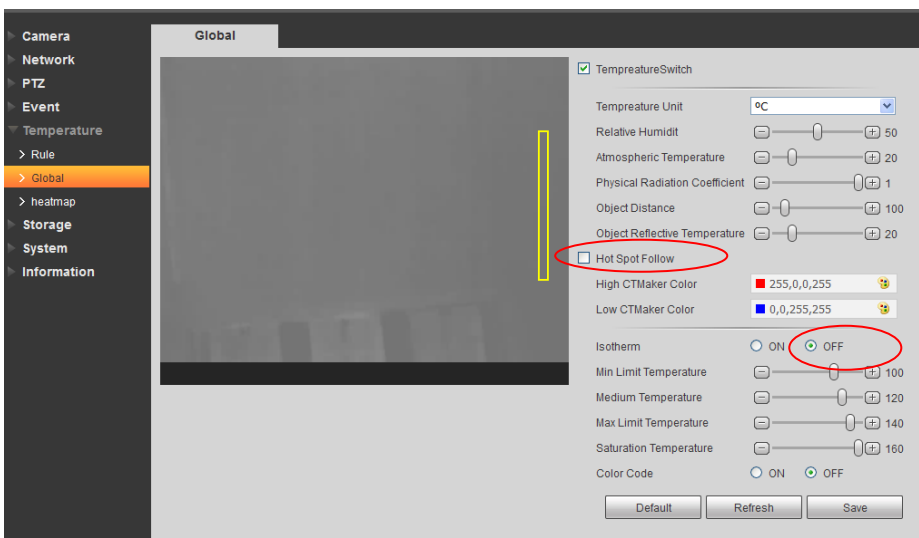

Hierfür wird der Haken bei **Hot Spot Follow** entfernt, und der Eintrag bei **Isotherm** auf **OFF** gesetzt.

Abschließend bitte mit **Save** die Einstellung sichern.

Bei m IP-VCA wird im Streamingmenü als Kamera-Typ „**Dahua Http**“ zusammen mit einem der beiden Strings ausgewählt ( Bei der Testkamera funktionierten beide Kommandos in gleicher Weise).

The screenshot shows a configuration window for a camera. At the top, there is a checkbox labeled 'on / off' which is checked. Below this, the 'Camera IP:' section contains the IP address '192.168.1.75'. The 'Login:' section has a checked checkbox, 'User name : admin', and 'Password : 9999'. The 'Camera type:' section features two dropdown menus: the first is set to 'Dahua Http' and the second is set to 'cgi-bin/mjpg/video.cgi?subtype=1'. Below these, the URL field contains 'http://admin:9999@192.168.1.75/cgi-bin/mjpg/video.cgi?subtype=' followed by an 'Edit' button. At the bottom, there is a 'JPEG Mode' checkbox which is unchecked.

Bei früheren PC-Versionen, bei denen die Dahua-Kamera noch NICHT aufgeführt ist, bitte die Einstellung „User define“ wählen, und manuell („edit“ aktivieren!) in der Zeile „/cgimjpg/video.cgi?subtype=1“ ergänzen .

Alternativ dazu kann auch der Stream über **Dahua Rtsp** abgerufen werden:

The screenshot shows the same configuration window as above. In the 'Camera type:' section, the first dropdown menu is now set to 'Dahua Rtsp' and the second is set to 'cam/realmonitor?channel=1&subtype=1'. The URL field now contains 'rtsp://admin:9999@192.168.1.75/cam/realmonitor?channel=1&sub' followed by a checked 'Edit' button. The 'JPEG Mode' checkbox remains unchecked.